# **LED Floodlights**

Installation guide for LED Floodlights

# a LEVITON company

#### Important information

- It is recommended that luminaires are installed by a qualified electrician to ensure the installation complies with the local current wiring regulations.
- Any broken or damaged parts should be replaced as soon as possible. JCC will not accept responsibility for claims arising from sub-standard
- Do not install in areas that are exposed to continual running water or prone to flooding. Ensure that the mounting surface is both flat and stable.
- These products are designed for connection to a 220-240V~ 50/60Hz supply.
- The light source of this luminaire is not replaceable: When the light source reaches the end of it's life, the whole of the luminaire must be replaced.
- It may be necessary to upgrade your MCBs to allow for increased inrush current.
- Terminal block not included. Installation may require advice from a qualified person.

#### **INSTALLATION**


**ENGLISH** 

### Specifications Colour temp: 4000K Ra: 70

Total circuit wattage	Lumens	LpcW
10W	1000	100
20W	2100	105
30W	2800	93
50W	4500	90

Beam angle: 110°

Available finishes: Black(BLK) or White(WH)

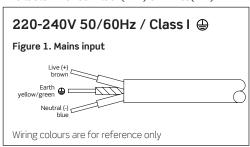

Terminal block must comply to EN 60998-2-1 or EN 60998-2-2 Terminal block specification: Number of Wavs Through Hole Mounting Type Pitch 8mm Current Rating 24A Termination Method Wire Size Screw Down 2.5 mm<sup>2</sup> Material Nylon Voltage Rating 380 V +125℃ Maximum Operating Temp Contact Material Brass Contact Plating Nickel

#### **PIR Specification**

10s±3s--10min±3s Ambient Light: 10lux-2000lux 5-8m Detection Distance: 120° Detection Range: Installation Height: Standby Power Consumption: ≤0.5W \*PIR versions IP44 only

#### General Maintenance Requirements

This product has no user servicable parts. JCC Lighting Products would recommend that the following maintenance is performed in order to prolong the life of this product: Clean with a damp cloth and dry with a lint free cloth or kitchen towel. Do not use abrasive cleaners.

Read instructions and check that you have all of the tools and accessories required to complete the installation correctly. Isolate power supply before starting the installation.

#### Installation procedure

- 1. Prepare the mains input cable for termination. Note that this product is class I and as such must be fitted with an earth connection.
- 2. Drill mounting holes and insert suitable wall plugs.
- 3. Rotate fitting to access screw mounting points on the bracket and secure using suitable fixings..
- 4. Terminate input wiring to the fitting as per Fig. 1 to the left using a suitable IP rated connector.
- 5. Check seals, gaskets and the cable gland integrity before testing the luminaire.
- 6. Turn on power supply and test for correct operation.







# **Profile & Dimensions**

#### Standard fitting


	Α	В	С	D
10W	131.4	26.5	119	107.8
20W	184.2	28.3	156.1	141.1
30W	214.1	30.4	177.5	162.5
50W	231.2	32.3	197.4	183

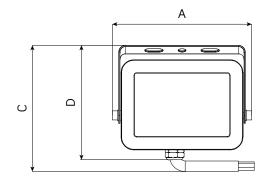


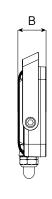

## Fitting with PIR

	Α	В	С	D
10W + PIR	131.4	56.9	26.5	190.8
20W + PIR	184.2	55.5	28.3	232
30W + PIR	214.1	58.3	30.4	278
50W + PIR	231.2	58.8	32.3	308.7

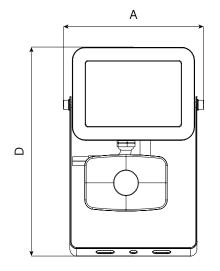

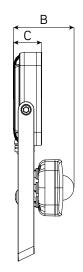

All dimensions in millimetres

#### Important warranty information

LED Floodlights are supported by a 3 year extended warranty; which must be registered online at jcc.co.uk/warranty.

The installer will be asked to provide the following information, which is detailed on a label attached to the luminaire's chassis: Product Code/Batch Code.